

Einstellungen Brücken / Setting Bridges


Stromversorgung Antrieb / power supply drive

Brücke 1 / bridge 1 (B1)
(-) GND
S2 ↔ 1

Brücke 2 / bridge 2 (B2)
(+) 24 VDC
S1 ↔ 2

Brücke 3 / bridge 3 (B3)
Impuls - NO
S3 ↔ 31

Brücke 4 / bridge 4 (B4)
Impuls - COM
32 ↔ *1 / 2

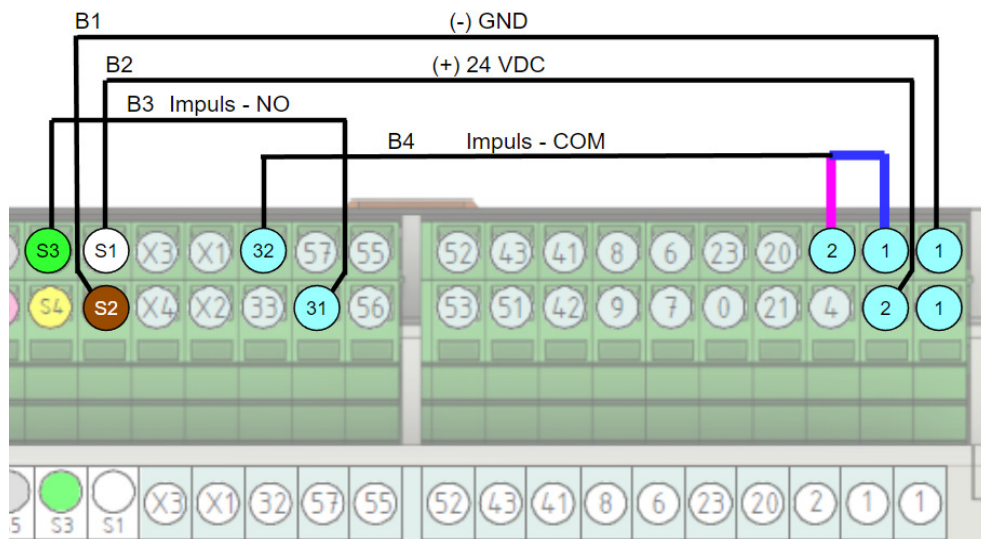

*Abhängig von der verwendeten Verriegelung / depending on the used lock


Stromversorgung extern / power supply external

Brücke 1 / bridge 1 (B1)
(-) GND
(-) ↔ **S2**

Brücke 2 / bridge 2 (B2)
*(+) 12/24 VDC
(+) ↔ **S1**

Brücke 3 / bridge 3 (B3)
Impuls - NO
S3 ↔ 31

Brücke 4 / bridge 4 (B4)
Impuls - COM
*(+) / (-) ↔ **32**

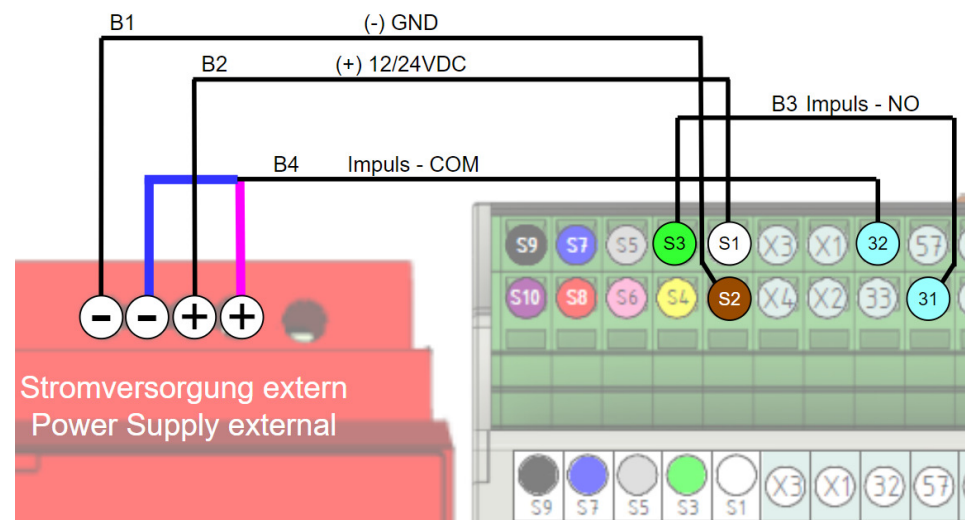

*Abhängig von der verwendeten Verriegelung / depending on the used lock

Brücke B4 muss abhängig von der verwendeten Verriegelung entweder gegen (+) oder (-) der Stromversorgung verbunden werden!
Depending on the used lock, bridge B4 must be connected either against (+) or (-) of the power supply!

Var.1: Schaltung gegen (-) GND / circuit against (-)	Var.2: Schaltung gegen (+) 12/24VDC / circuit against (+) 12/24VDC
Brücke B4 zwischen 32 und (-) GND der Versorgung setzen place bridge B4 between 32 and (-) GND of the power supply	Brücke B4 zwischen 32 und (+) 12/24 VDC der Versorgung setzen place bridge B4 between "32" and (+) 12/24 VDC of the power supply

Details Verriegelungen / details lock:

